


INSTALLATION GUIDE



Make: Renault

Model: C Series Wide

Year: 2013-2021

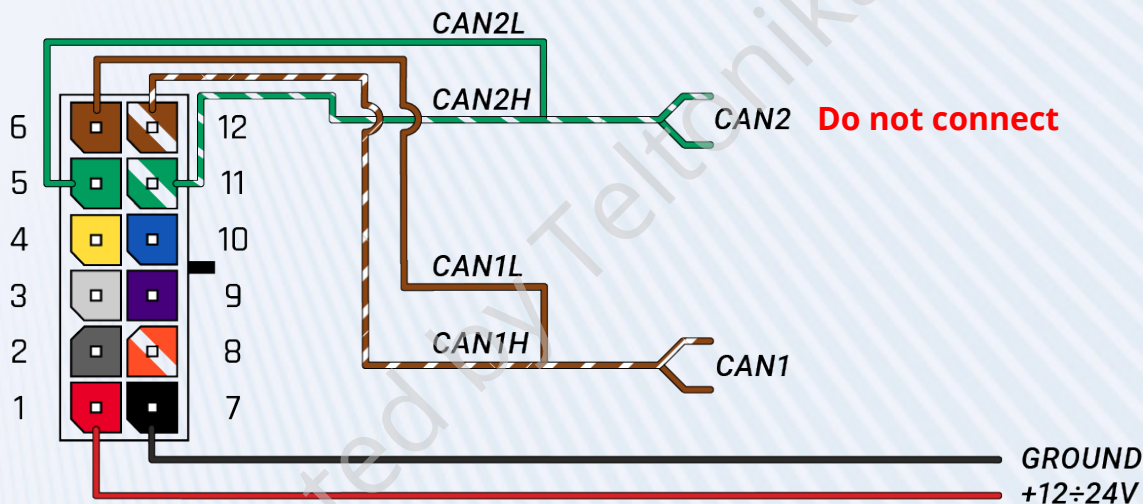

Installation steps:

1. Upload vehicle CAN configuration via FOTA WEB.
2. Connect FMX150 CAN cables to the wires as shown in the installation guide.
3. Connect the power and GND to the wires as shown in the installation guide.

In case of right hand drive vehicle please look for the mentioned connection location on the other side. If it's not available there then check the original location. If neither, please contact Teltonika Telematics Support!

Troubleshooting - in case there are issues with CAN data:

Please contact Teltonika Telematics Support with the following information:

- Vehicle make/model/year
- Chassis code or generation/VIN number
- Responses to oeminfo, Ivcngetinfo, Ivcncheck SMS/GPRS commands
- Connection pictures
- FMX150 firmware

Access to connection points

Remove the cover of the fuse box then lift the panel up.



Vehicle CAN bus and power location

Device **MUST NOT** be installed when ignition is on!!!


CAN wires: wires of the black connector with orange bracket



Vehicle CAN bus connections*

CAN1L: black connector green wire (7005A,C)

CAN1H: black connector yellow wire (7004A,C)

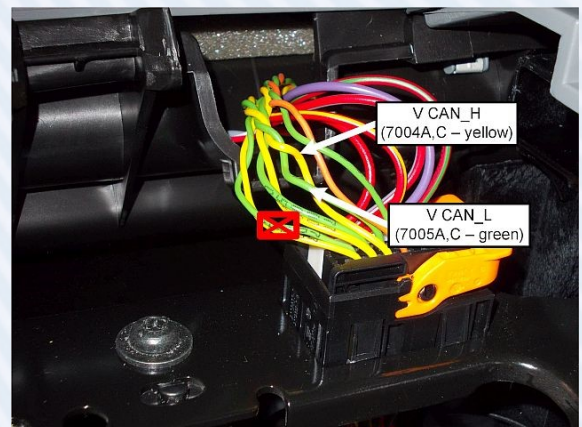

*NOTE! Wire colors might differ due to various factors on manufacturer's side.
In such cases, please follow connection points shown in photos.

Power connections

Battery: battery+ point - point 30 (DIN 72552)

Ignition: third red wire on the side of the fuse box in the right corner

GND: chassis

